

## NOTES:

- INSTALL EACH LIQUID AND SUCTION LINE THROUGH CEILING PANEL INDEPENDENTLY. DO NOT COMBINE.
- 2. INSTALL HEAT EXCHANGER HORIZONTALLY BEHIND COIL WITHOUT OBSTRUCTING AIRFLOW.
- 3. INSTALL BALL VALVE UPSTREAM OF EXPANSION VALVE AND SOLENOID VALVE.
- 4. INSTALL EXPANSION VALVE WITH REMOVABLE FILTER SCREEN.
- 5. HEAT EXCHANGERS TO BE FROM SAME MANUFACTURER AS REFRIGERATION EQUIPMENT.
- FIELD INSTALL HEAT EXCHANGERS WHERE REQUIRED. VERIFY REQUIREMENT WITH OWNER'S REPRESENTATIVE PRIOR TO COMMENCEMENT OF ANY BIDDING, ORDERING, OR INSTALLATION.
- THIS DETAIL IS NOT INCLUSIVE OF SEISMIC REQUIREMENTS. PROVIDE SEISMIC EQUIPMENT SUPPORT IN ACCORDANCE WITH ALL APPLICABLE CODES AND MANUFACTURER'S DIRECTIONS.

## EVAPORATORS EQUIPPED WITH HEAT EXCHANGER

NO SCALE

DATE	DEFENSE COMMISSARY AGENCY DIRECTORATE OF ENGINEERING FORT LEE, VIRGINIA - LACKLAND AFB, TEXAS	DESIGN STANDARD 239000-10A
JUN 2022	TITLE REF.	239000-10A
	EVAPORATOR PIPING DETAIL REV.	